



GatorSTRAP® MANUAL TENSIONING TOOL


1. Position the tail through the large center area of the tool.

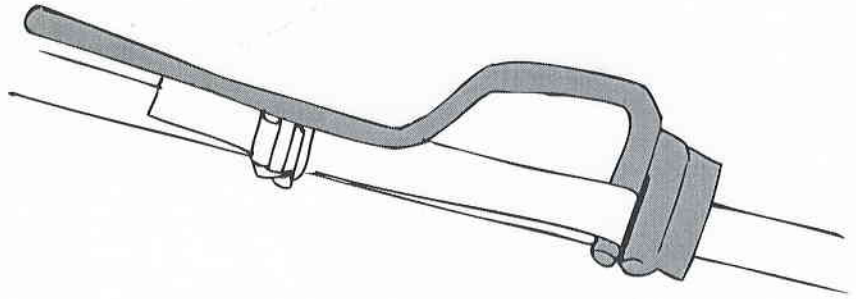

2. Rest the blade of the tool against an edge on the load and pull the handle towards you to apply tension to the strap.

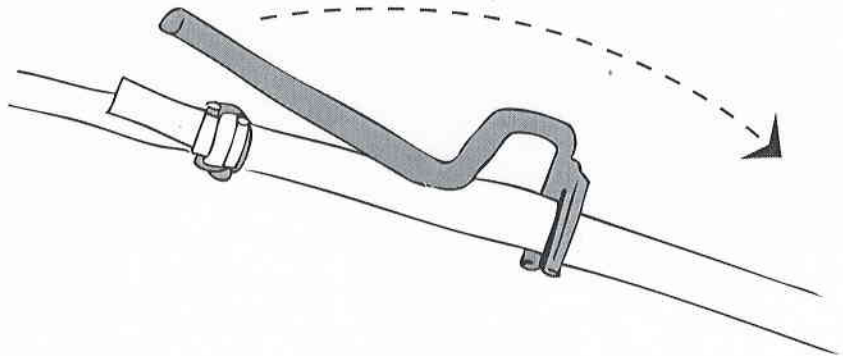

3. Pull the slack out of the strap and repeat steps 1 and 2.

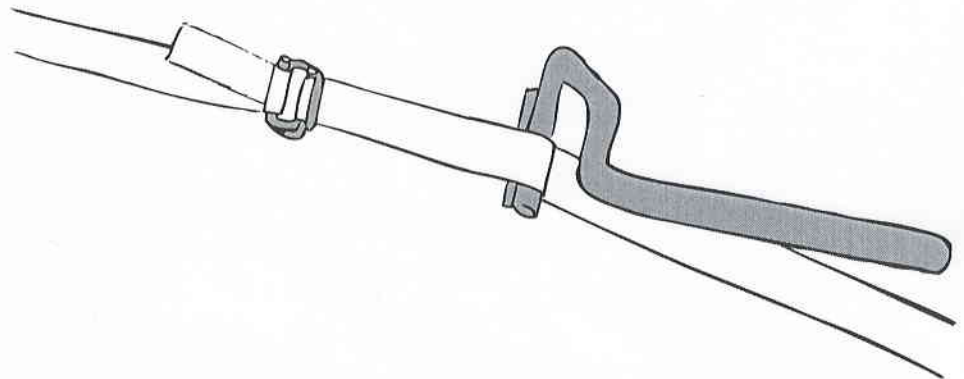

4. Pull until you reach desired tension.

