




Instructions for Use

# EP-1625

Windlass Steel Tensioners for  
Round Loads


1.

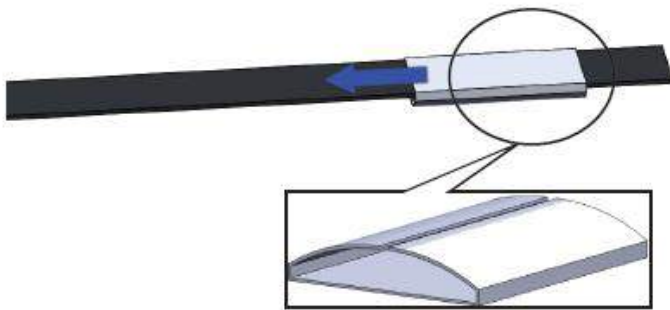

Slide Standard Steel Closed Seal over steel Strap.

Make sure seal is all the way down to the strap coil.


2.

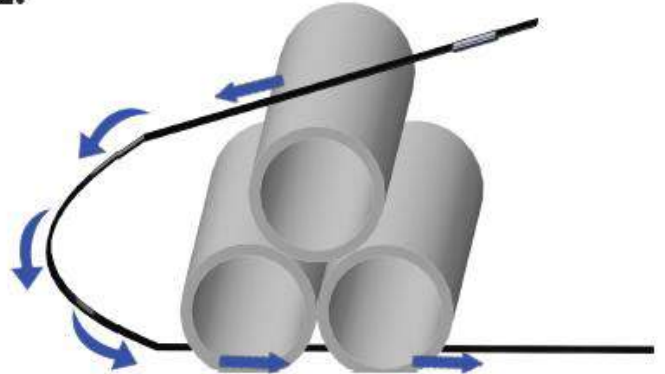

Place steel strap around load, making sure to start by going over the load instead of under.


Make sure the seal is near loose end of the strap.

3.

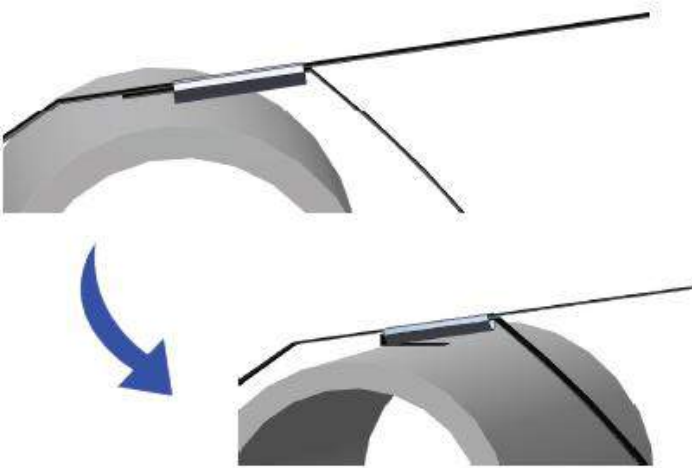

Slide front end of strap under the upper strap and fold the tip of the lower strap under the seal.

4.

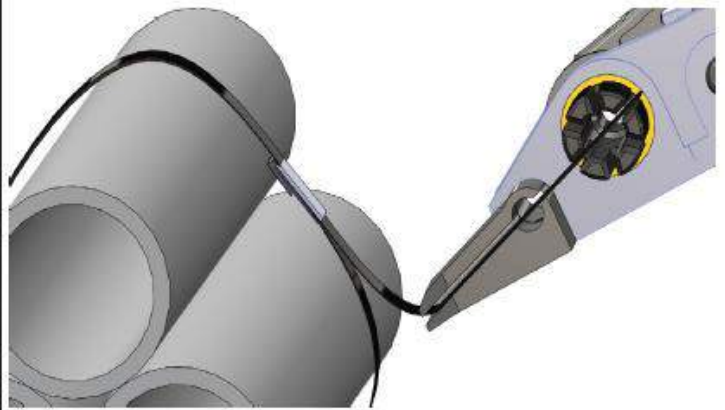

Slide the strap through the pusher nose and the windlass.

5.



Crank the handle to tension load until taut.

6.



Open Sealer and place over the seal.

7.



Crimp seal by squeezing sealer handles together.

8.



Cut strap by moving tensioner up and down to crease the strap until it snaps off.



Please refer to Safety Guide before operating.